

## Short user manual for the Code calculator

To switch on your Code calculator please choose and press respective button for approximately 2 seconds:



if you wish to log-on to NetBank or



if you wish to approve payment on NetBank.

After entering PIN code you should approve it by pushing button “OK”.



### Logging in for the first time and changing of initial PIN code

The Bank issues a Code calculator with an initial PIN code 11111. When using the Code calculator for the first time, the customer should change the initial PIN code for a personal five-digit PIN code.

<i>Customer's activities</i>	<i>Actions to be taken on your Code calculator and responses it generates</i>
Switch on your Code calculator	Push the button “Login 1” and keep it for approx.2 seconds
Enter initial PIN code	11111, confirm with button “OK”
Enter your new personal five-digit PIN code	NEW PIN 1. Enter your own new five-digit PIN code. “OK”
Enter repeatedly your new personal PIN code	PIN CONF 2. Enter repeatedly your new personal PIN code. “OK”
PIN code has been changed	NEW PIN CONF. “OK”
PIN code has not been changed. Try one more time!	FAIL NEW PIN CONF.



### Change of PIN code


<i>Customer's activities</i>	<i>Actions to be taken on your Code calculator and responses it generates</i>
Switch on your Code calculator	Push the button “Login 1” and keep it for approx.2 seconds
Enter your five-digit PIN code	-----, confirm with button “OK”
Open application for changing PIN code	Push the button OK and keep it for approx.2 seconds
Enter your five-digit PIN code	-----, confirm with button “OK”
Enter your new five-digit PIN code	NEW PIN 1. Enter your new five-digit PIN code. “OK”
Enter repeatedly your new PIN code	PIN CONF 2. Enter repeatedly your new PIN code. “OK”
PIN code has been changed	NEW PIN CONF. “OK”
PIN code has not been changed. Try one more time!	FAIL NEW PIN CONF.



### Confirmation of payments on NetBank

<i>Customer's activities</i>	<i>Actions to be taken on your Code calculator and responses it generates</i>
Switch on your Code calculator	Push the button “C-R 2” and keep it for approx.2 seconds
Enter your five-digit PIN code	-----, approve with button “OK”
Enter eight-digit payment code that is displayed on NetBank	-----, approve with button “OK”
Code calculator will generate six-digit code. Enter it in NetBank.	-----



If you have entered wrong digit when entering payment code in Code calculator, please use button . If you will push this button for longer time, it will delete all the entered digits.



### How to switch off your Code calculator?

Code calculator switches off automatically in approx.30 seconds or you can switch it off by pushing the button “OK”.